

WOOD CARE INSTRUCTIONS: **WOODLAND, E*WOOD, SOLID WOOD AND PROWOOD TABLE TOPS**



Gently cleanse with a soft cloth dampened with mild detergent and water solution. Wipe dry with a clean soft cloth. Scratches in the wood can be repaired using a colored wax paper stick.

Spills of liquid should be wiped dry immediately. Do not use ammonia, bleach, degreasers or abrasive cleaners. Avoid prolonged or excessive exposure to direct sunlight, high temperatures, or high/low humidity. Improper care will void the manufacturer's warranty.

It is the customer's responsibility to maintain a 30% humidity level to accommodate wood table tops.

Surface scratches due to unprepped or unglazed china will not be covered under Oak Street Manufacturing's warranty.