


Assembly Instructions

Bolt Down Bases - Black

BDB-STD, BDB-BAR, BDB-4-STD & BDB-4-BAR

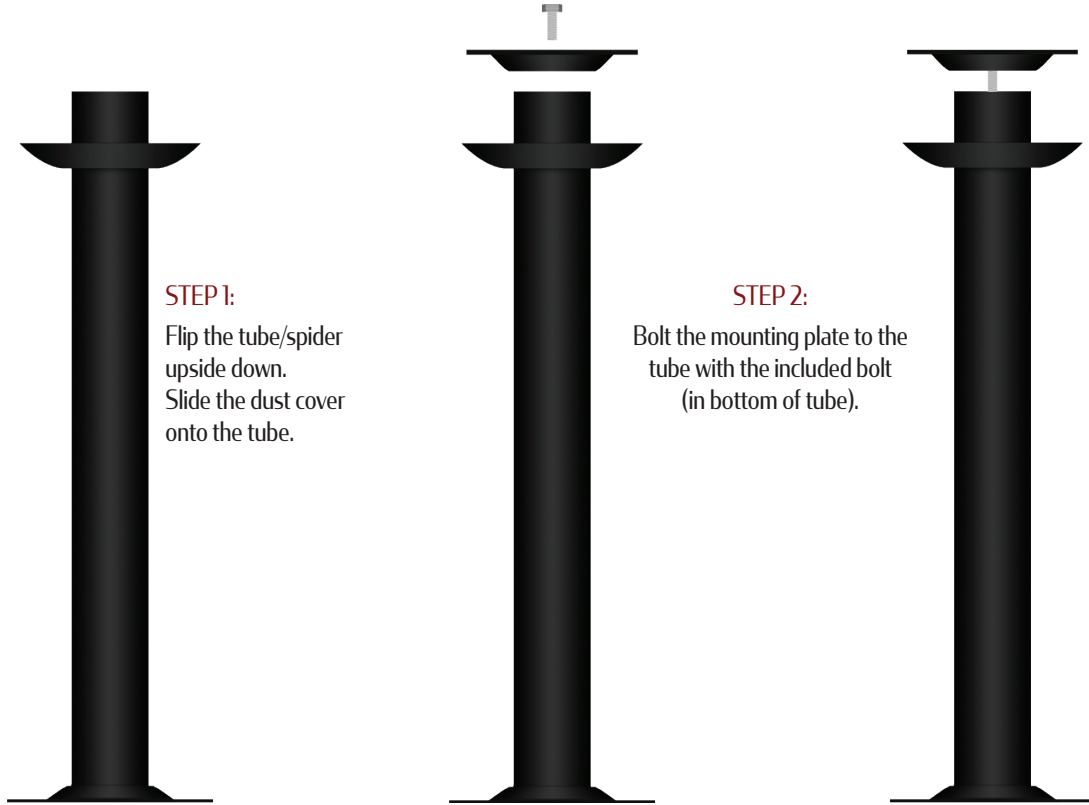


STEP 1:
Flip the tube/spider
upside down.
Slide the dust cover
onto the tube.

STEP 2:
Bolt the mounting plate to the
tube with the included bolt
(in bottom of tube).

Bolt down bases should not be spaced more than 36" apart

Cast iron bases are warranted for all Oak Street tops, excluding granite and/or tops that are oversized & more than 6 lbs/ft²

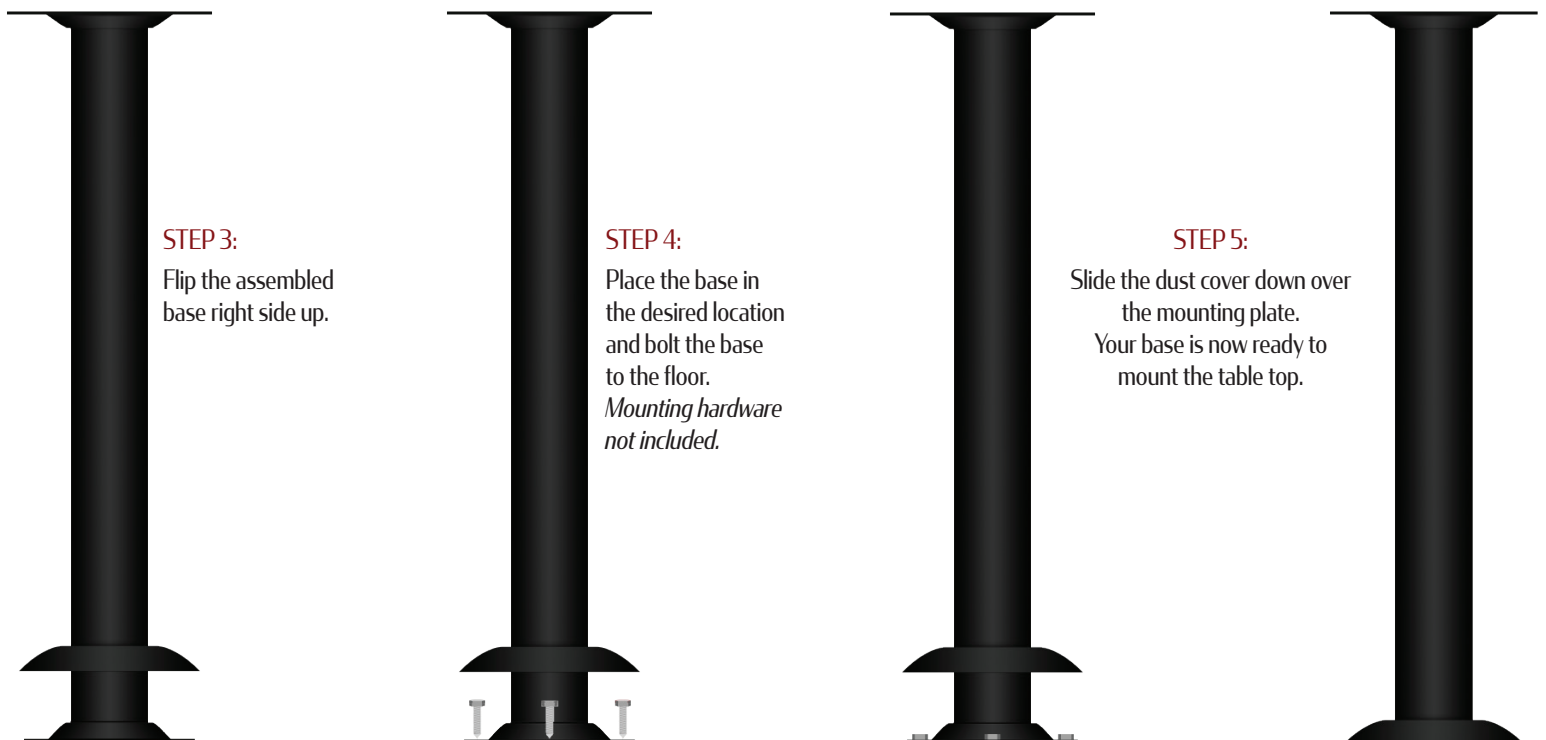

STEP 3:
Flip the assembled
base right side up.

STEP 4:
Place the base in
the desired location
and bolt the base
to the floor.
*Mounting hardware
not included.*

STEP 5:
Slide the dust cover down over
the mounting plate.
Your base is now ready to
mount the table top.