

Assembly Instructions

Bolt Down Bases - Chrome


BDB-CHR-STD & BDB-CHR-BAR




STEP 1:
Attach the spider to the tube's top side with the built-in bolts (2).



STEP 2:
Flip the tube/spider upside down. Slide the dust cover onto the tube.

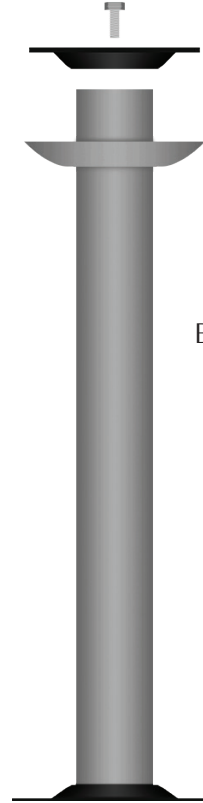


STEP 3:
Bolt the mounting plate to the tube with the included bolt (in bottom of tube).

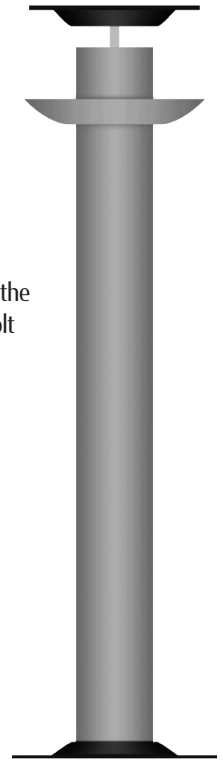


Bolt down bases should not be spaced more than 36" apart


Cast iron bases are warranted for all Oak Street tops, excluding granite and/or tops that are oversized & more than 6 lbs/ft²

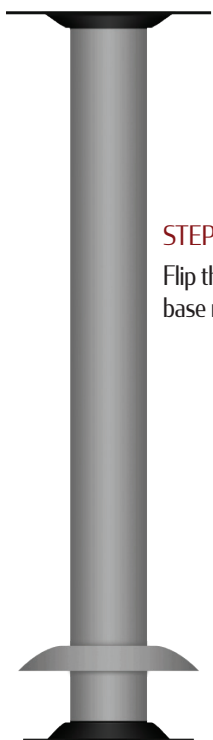

STEP 4:
Flip the assembled base right side up.

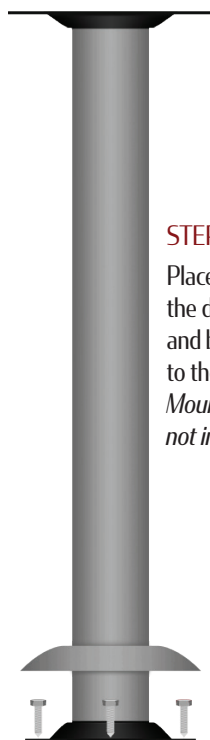

STEP 5:
Place the base in the desired location and bolt the base to the floor. *Mounting hardware not included.*

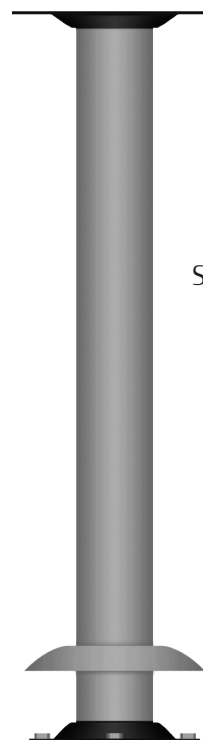

STEP 6:
Slide the dust cover down over the mounting plate. Your base is now ready to mount the table top.

